

TO USE ONE TOUCH KEYS

- Press one touch speed dial key.
- Number is automatically dialed.

TO PROGRAM STATION SPEED DIAL

Display sets only.

- Press **SPEAKER** key.
- Enter **755** followed by the station speed dial location (**0-9**).
- Dial **9 + telephone number**.
- Press **HOLD**.
- Enter name if desired.
- Press **HOLD**.
- Press **SPEAKER** key to hang up.

TO USE STATION SPEED DIAL

- Press the **SPEAKER** key.
- Press **#7**.
- Dial the station speed dial location (**0-9**).

TO SET UP VOICE MAIL

Soft Keys are located under the display

1 = yes and 2 = no

- Press **VMsg** soft key or the MESSAGE button
- Enter security code 0000
- System will prompt for the following:
 1. Record your name
 2. Enter the 1st three characters of your name
 3. Select directory status YES (1)
 4. Record greeting
 5. Select security code
- Press 1 when finished to confirm mailbox settings

TO ACCESS VOICEMAIL

- From your phone press **VMsg** soft key or Message key.

- Enter security code
- Use soft keys (located under display) to listen to new/old messages, leave messages,
- From another phone press vmsg & #.
When voice mail answers enter 9 + **your extension**. Follow prompts.
- From outside the office, dial **main number**.
When the voice mail system answers, enter 9 and **your extension**. Follow prompts.
- If call is answered, ask for transfer to Voice Mail. When Voice Mail answers, press 9 and your extension number.

VOICE MAIL QUICK KEYS

Check new	4
Leave a message	5
Check old messages	6
Set up options	7
Switch personal greetings	745
Change standard greeting	746
Change alternate greeting	747

While listening to a message from outside the office, enter 3 to hear menu options or immediately press the following to select an action

Repeat the message	3#
Save message as new	30
Check the next message	35
Delete message	36
Archive message	37
Time Stamp	38
Redirect message	39

If the message has finished playing you can drop the 3 for the above features

Message playback options	
Skip to end of message	1
Skip to end of message, do not hear	
Caller ID or time stamp	3
Rewind	7
Pause	8
Forward	9
Repeat	#
Save as new	*

NEC SV9100 TELEPHONE & VOICE MAIL USER GUIDE



TO ADJUST CONTRAST ON DISPLAY

- Press ▲ or ▼ arrow key while phone is idle.

TO ADJUST SPEAKER VOLUME

- While using **SPEAKER**, press ▲ or ▼ arrow key.

TO ADJUST HANDSET VOLUME

- While using handset, press ▲ or ▼ arrow key.

TO ADJUST RING TONE/VOLUME

- Press ▲ or ▼ arrow key while phone is ringing.

TO CHANGE RING TONE

- Press **SPEAKER** key.
- Dial **720**.
- Press **1** to set Intercom ring; **2** to set trunk ring.
- Enter ring pattern (1-8) for desired ring tone.
- Press **SPEAKER** to set.

TO PLACE A CALL

- Lift handset or press **SPEAKER** key.
- *For internal call* – dial 3-digit extension.
- *For outside call* - dial 9 + telephone number

TO ANSWER A CALL

- Lift handset or press **SPEAKER** key.

TO TURN MIC ON/OFF (SPEAKER ONLY)

- Press **MIC** key. Red light means microphone is turned on.

TO MUTE A HANDSET CALL

Handset Only

Press the **MIC** button and when it is flashing you are muted to your caller

TO PLACE CALL ON HOLD

- Press the **HOLD** key.

PLACING A CALL ON PARK

While connected to the outside caller, press the **PARK 1** or **PARK 2** key. The park key will flash

TO RETRIEVE A CALL OFF OF PARK

From any phone press the flashing **PARK 1** or **PARK 2** key

TO TRANSFER A CALL

- While on a call, press **TRANSFER** key.
- Dial extension where call is to be transferred.
- Hang up, or supervise call (optional) then hang up.

DIRECT TRANSFER TO VOICE MAIL

- While on a call, press **TRANSFER** key, enter destination extension + **8** and hang up.
- Caller is transferred directly into user's voice mail account.

CONFERENCE CALL

- While on a call, press **CONF** key (soft key in display).
- Dial second number you wish to conference.
- When second party answers, press **ADD & BEGIN** (soft keys)

CHANGING INTERNAL CALL MODE

To have your phone ring dial 723
For hands free dial 721

LAST NUMBER REDIAL

- Press **REDIAL** key. Display shows last number dialed.
- Press **#** key to redial number.
- To search for a desired number in the redial list, press the up or down arrow keys in the display; lift handset to place the call.

CALL FORWARDING ALL - SET

- Press **FWD ALL** key or dial 741.
- Press **1** to set.
- Enter **3-digit** extension or **9 + outside number**.
- Press **SPEAKER**.

CALL FORWARDING ALL - CANCEL

- Press **FWD ALL** key or dial 741.
- Press **0** to cancel.

CALL PICKUP DIRECT

- To pick up another ringing extension, lift handset and press the **DIR PICK** key or dial ******.
- Enter extension number and converse with party.

TO PROGRAM ONE TOUCH KEYS

- Press **SPEAKER** key.
- Enter Service Code **751**.
- Press one touch key.
- Enter **01** follow by ext or number.
- Press **HOLD**.
- Press **SPEAKER** to hang up.

Scrolling Caller ID and Redial

Press the **LIST** soft key
Press **REDIAL** or **CID**
Use the Up/Down arrows to scroll
Press the speaker key or lift handset to dial desired number

Soft Keys are located under the display